

 


# QUADRA-FIRE®

## WOOD UNIT MAINTENANCE




### BAFFLE & BLANKET PLACEMENT

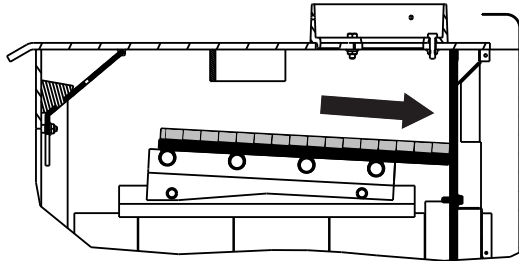

Baffle and blanket placement is critical to heat output, efficiency and overall life of the unit. Make sure the baffle is pushed all of the way to the back of the firebox and the blanket is laying flat.

### INSPECT FIREBRICKS & ASH GRATE (AFTER EACH CLEANING)

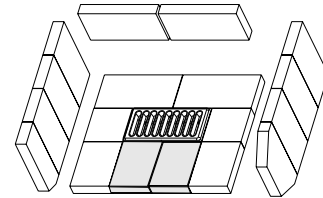 


Firebrick is designed to protect your firebox. Replace firebricks that are crumbling, cracked or broken. If you have an optional ash door, check to make sure the door is closing properly.


### CHIMNEY & CAP INSPECTION

 The chimney and chimney cap must be inspected for soot and creosote during the burn season. This will prevent pipe blockage, poor draft, and chimney fires.

Always burn dry wood to help prevent cap blockage and creosote build-up.

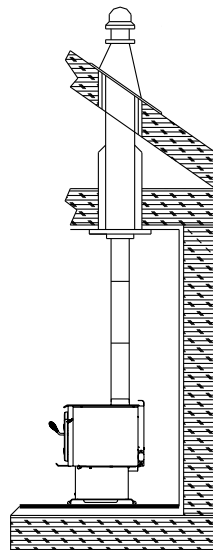


### DOOR & LATCH CHECK

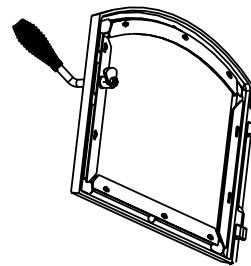 

Keeping the door and glass gasket in good shape will maintain good burn times on a low burn setting.

 Check the glass frame for loose screws to prevent air leakage.

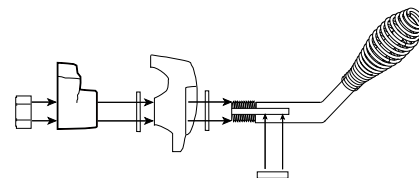

Check the door latch for proper adjustment. This is very important especially after the door rope has formed to the stove face.

Start the first inspection of your unit after the first 2 months of use, or if performance changes, and adjust your schedule accordingly. Maintenance is required for safe operation and must be performed to maintain your warranty.

